

INSTRUCTION MANUAL

Instructions

MOUNTING THE ROOF TENT ON YOUR VEHICLE WARNING!

If you have any back, knee or any other health complications, do NOT attempt to mount the roof tent on your vehicle. Your vehicle MUST have a roof rack or cross bars installed in order to mount the roof tent. The cross bars MUST have a dynamic weight load of at least 165lbs(75kgs) and MUST be at least 30" (76cm) apart.


If you are unsure of the mounting process or have any questions, please contact us.

It is easiest to mount the roof tent from the side of your vehicle, not from the front or the back.

1. Have two people stand at the front of the roof tent, and two people at the back.
2. Grab the panel on the bottom of the roof tent and lift up to your waist.
3. Lift the roof tent up to your shoulders, and then above your head.
4. Gently slide the roof tent onto your cross bars.
5. Make sure the roof tent is centered.

INSTALLING THE MOUNTING BRACKETS

IMPORTANT: WHEN MOUNTING THE ROOF TENT ON YOUR VEHICLE. MAKE SURE THAT EACH BRACKET IS SECURELY FASTENED. FAILURE TO DO SO COULD CAUSE DAMAGE, INJURY OR EVEN DEATH

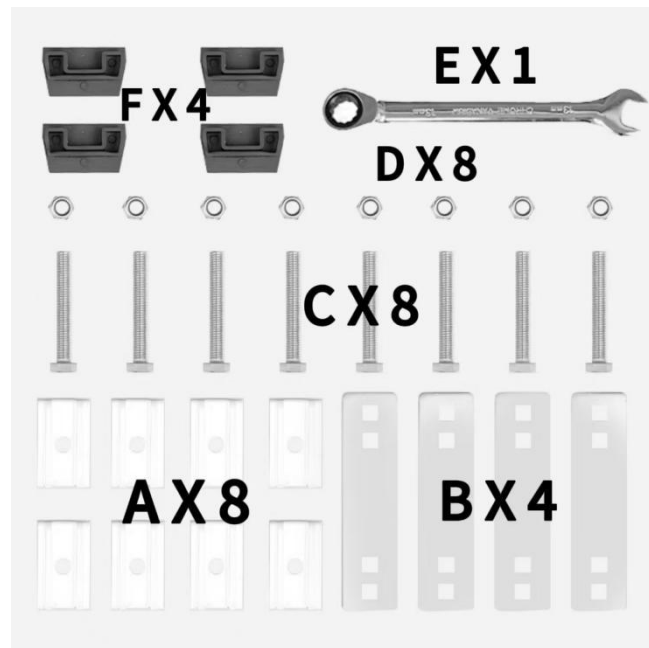

NOTE: apply lubricant to the bolts and nuts before tightening to reduce the risk of thread galling.

1. Take the top bracket [A] (with the round holes), and insert two bolts [C] according to the width of your cross bars.

2. Insert top bracket [A] with the two bolts into the rail under the roof tent:



3. Have one person lift the roof tent, while another person slides the piece over the cross bar, so that one bolt is on each side of the cross bar.



4. Take the bottom bracket [B](with the square holes), and fit it under your cross bar so that the bolts go through it.



5. Attach one nut [C] on each bolt [D], and tighten with a 13mm wrench [E].

IMPORTANT: apply lubricant to the bolts and nuts before tightening to prevent thread galling.

6. Tighten the nuts until the bottom bracket [A] starts to bend lightly. Do NOT keep tightening after it has already started to bend as this will make it difficult to mount again in the future. See image below.



7. Repeat the procedure for the remaining 3 brackets.

NOTE: check that the roof tent is securely attached after a short distance, and thereafter at regular intervals. Tighten the mounting brackets whenever necessary.

OPENING THE HARD SHELL

1. Release the four hard shell locks (or unbuckle straps) of the tent and pull down the metal shell to release.



2. With one hand, push up the hard shell. The gas struts will allow it to open on its own



3. Once the tent is fully open, start installing the ladder.



INSTALLING THE LADDER


CAUTION: FAILURE TO PROPERLY SECURE THE LADDER COULD CAUSE DAMAGE AND SERIOUS INJURY. CAREFULLY READ THE INSTRUCTIONS BELOW BEFORE ATTEMPTING TO USE THE LADDER.

The ladder acts as the support for the Skycamp's extension panel. Always make sure the ladder is firmly planted in the ground, and each step is securely locked before going up the ladder.

1. Find the part where the ladder and the tent are connected (as shown in the picture below)



2. Align the ladder with the bottom of the tent where the ladder hangs.

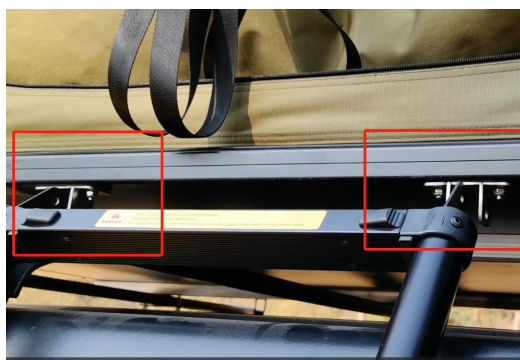

3. Find this accessory in the picture below (there are two of them)



4. Insert it into the ladder hole to secure the ladder to the bottom of the tent



5. Repeat the same steps for the other side and the ladder is installed.

Caution: The ladder should NOT be over-extended as it does not offer enough support, and is should not be too vertical either.

After the ladder has been securely installed, please follow the directions below while going up and down the ladder:

- Grab the sides of the ladder with both hands at all times.
- Take one step at a time.
- NEVER step on the top 2 steps when going up or down the ladder.

ERECTING THE CANOPY

The canopy should be erected using the two steel rods included with your roof tent:

- 1 .Enter the tent and insert the bracket on the outside of the tent into the reserved hole



2. Hold the rod with one hand, and with the other grab the corner of the canopy and insert the rod's hook, facing down, into the metal grommet.



3. Repeat the process on the other side of the canopy



CLOSING THE HARD SHELL

WARNING: Before closing the roof tent, you **MUST** unfasten the bungee cords that are attached under the panels. Leaving the cords attached puts stress on the tent and may cause the fabric to tear.

1. Get inside the tent and remove the two tent poles before closing the tent.



(Note: Be careful when removing the poles. First, grab the top of the poles and pull them inward to separate the poles from the cloth they are hooked to, and then carefully pull the poles out)

2. After that, put the tent's drawstring in the direction of the tent's entrance.



3. Then carefully go down the ladder.
4. Pull down the drawstring until the tent is completely closed.
5. Then tuck the extra fabric inside the tent.



6. After that, fasten each of the tent's four latches.



7. Adjust the fabric straps of the latches to make sure they are tightly fastened.



7. Starting at the top step, retract the ladder. Make sure to press the release button with your thumb and be careful not to pinch your fingers between steps.

8. Retract the ladder and fasten the ladder latch, then remove the two mounting screws from the ladder in order to remove the ladder from the tent.

NOTE:

- The fastening straps keep your roof tent closed and make sure it does not open when driving.
- ALWAYS make sure that the hard shell is completely closed and the straps are securely fastened before driving.
- If you find it difficult to completely close the roof tent, it may be due to excess bedding left inside the tent.
- In this case, remove some of the bedding and try again. Speed Limit: the recommended speed limit when having the roof tent on your vehicle is 70 mph (110km/h).
- Driving speed should always be adjusted according to the current driving conditions, such as road type and quality, weather (wind conditions, rain), and applicable speed limits.
- Drive slowly on speed bumps and bumpy roads.

Product images in this manual are for illustrative purposes only and may differ from the actual product.